

FD-3 series

In line medium pressure filters



Technical Information

Housing

Pressure: Max working 110 bar (1600 psi) (acc. to NFPA T 3.10.5.1)
Burst 330 bar (4800 psi) (acc. to NFPA T 3.10.5.1)

Connection Ports: 1/2" BSP (other thread options on request)

Materials: Head: anodized aluminium alloy
Bowl: anodized aluminium alloy
Seal: Buna-N (FKM on request)

By-pass: No by-pass or 6 bar (90 psi) setting

Element

Filter Media: Microglass fiber 4,5 - 7 - 12 - 18 - 27 $\mu\text{m}_{(c)}$ (acc. to ISO 16889)
Cellulose 10 $\mu\text{m}_{(c)}$ (acc. to ISO 16889)
Wire mesh 10 - 25 - 60 - 125 μm

Differential collapse pressure: 21 bar (300 psi) (acc. to ISO 2941)

Filtrec elements are tested also according to ISO 2942 and ISO 23181

Common

Working temperature: -25°C +120°C (-13°F +248°F)

Fluid compatibility (acc. to ISO 2943):

Full with HH-HL-HM-HV (acc. to ISO 6743/4).

For use with other fluid applications please contact Filtrec Customer Service (info@filtrec.it).

Ordering information

MEDIA	
000	no element
G03	microglass fiber $\beta_{4,5 \mu\text{m (c)}} \geq 1000$
G06	microglass fiber $\beta_{7 \mu\text{m (c)}} \geq 1000$
G10	microglass fiber $\beta_{12 \mu\text{m (c)}} \geq 1000$
G15	microglass fiber $\beta_{18 \mu\text{m (c)}} \geq 1000$
G25	microglass fiber $\beta_{27 \mu\text{m (c)}} \geq 1000$
C10	cellulose $\beta_{10 \mu\text{m (c)}} \geq 2$
C25	cellulose $\beta_{25 \mu\text{m (c)}} \geq 2$
T10	wire mesh 10 μm
T25	wire mesh 25 μm
T60	wire mesh 60 μm
T125	wire mesh 125 μm

	NOMINAL SIZE	MEDIA	ELEMENT COLLAPSE	SEALS	CONNECTION	BY-PASS	INDICATOR PORT OPTION	INDICATOR
Filter assembly FD-3	10	G10	A	V	B3	D	W	VX5
Filter element D-3	10	G10	A	V				

SEALS	
B	NBR
V	FKM

CONNECTION	
B3	1/2" BSP


For different thread options please check availability with Filtrac Customer Service.

BY-PASS	
0	no by-pass
D	6 bar / 90 psi

INDICATOR PORT OPTION	
T	indicator port with plug
W	indicator port without plug

INDICATOR	
000	no indicator
VX5	differential visual switch 5 bar/ 70 psi
EX5	differential electrical visual 5 bar/ 70 psi

Overall dimensions

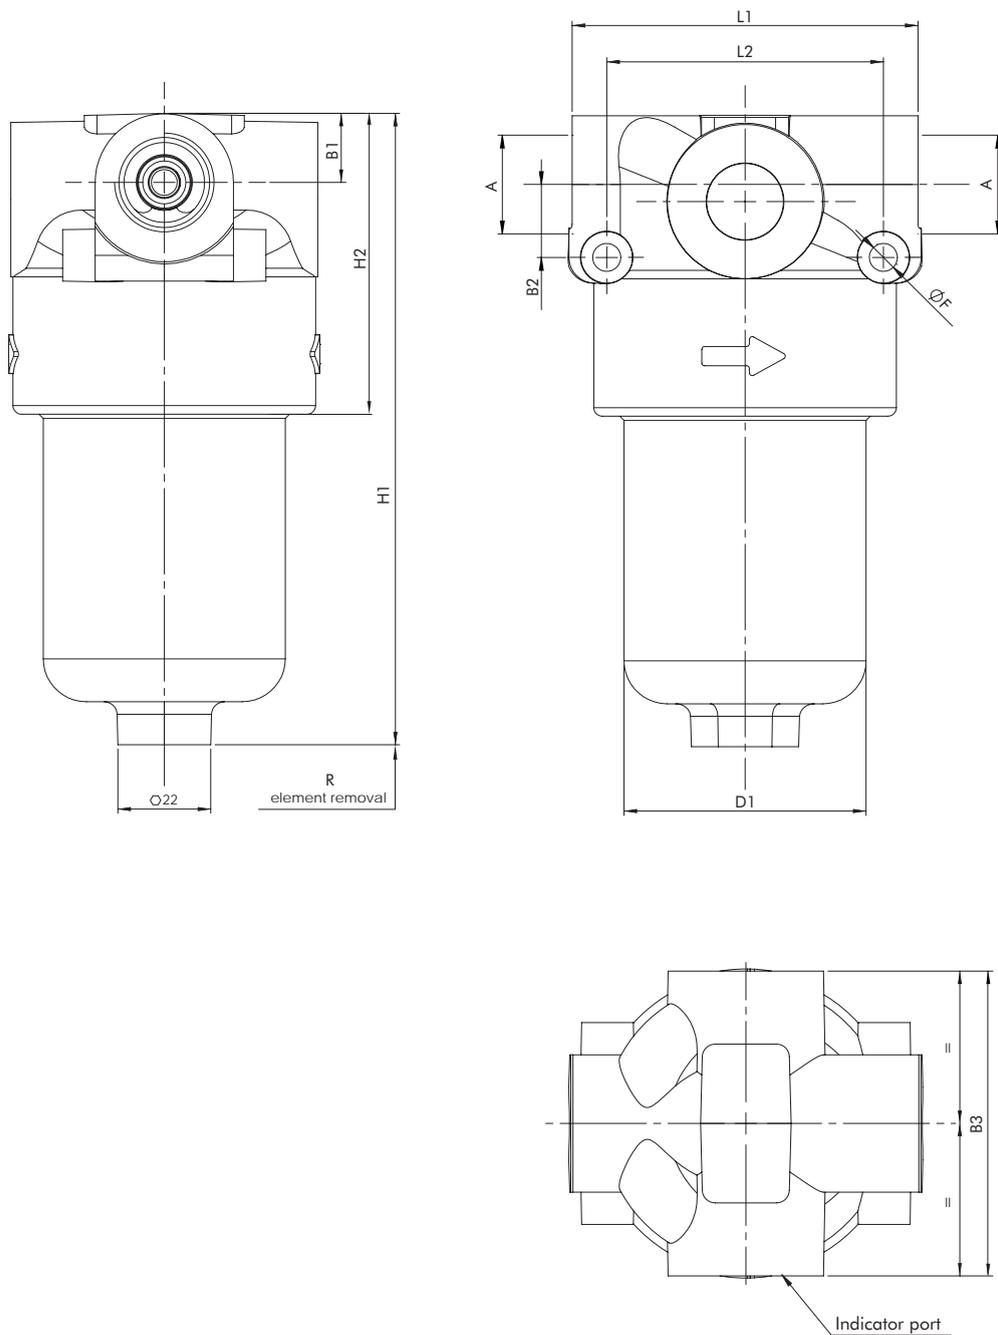

Nominal size

CODE	A	B1	B2	B3	D1	F	H1	H2	L1	L2	R	WEIGHT
FD-3-10	1/2" BSP	16	17	72	56	6,5	147	70	80	64	90	2,4 Kg
FD-3-11							236					2,6 Kg

Pressure drop diagrams

The total Pressure Drop (Δp) value is obtained by adding the Δp values of filter housing and filter element at the given flow rate. This ideally should not exceed 1,0 bar (14,5 psi) and should never exceed 1/3 of the set value of the by-pass valve.


PRESSURE DROP THROUGH THE FILTER HOUSING

The Pressure Drop through the filter housing is governed by the port, not the bowl length and the oil viscosity.


PRESSURE DROP THROUGH THE CLEAN FILTER ELEMENT

The Pressure Drop through the filter element is related both to the internal diameter of the filter element and to the filter media; this value is affected by the oil viscosity in a roughly proportional way: e.g. when the D_p value from the curve is 0,2 bar and a 46 cSt oil is used, the corresponding value is 0,31 ($=0,2 : 30 \times 46$) bar.


Housing FD-3-10x

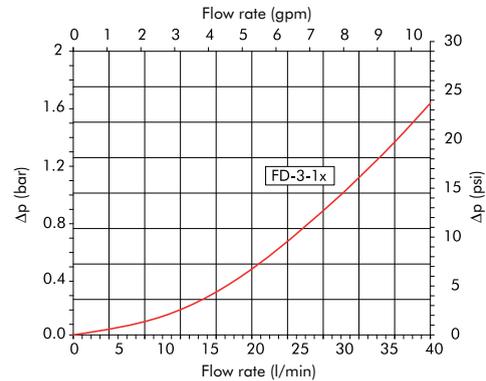


Element D3-10-...-A

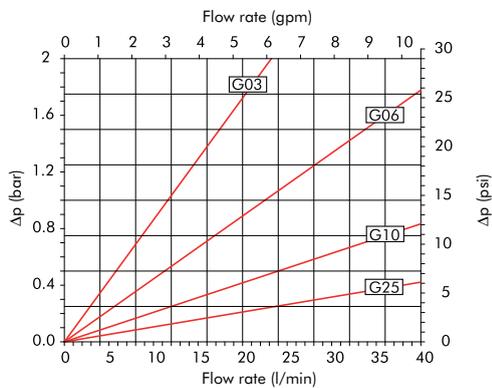


Element D3-10-...-A

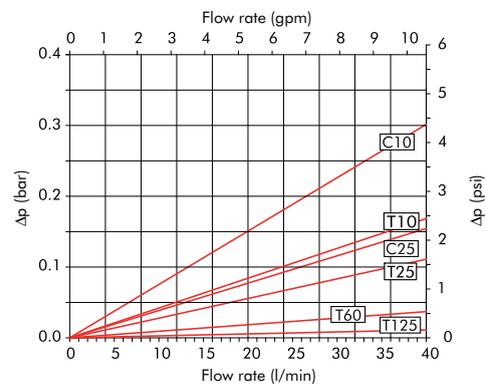

Element D3-11-...-A

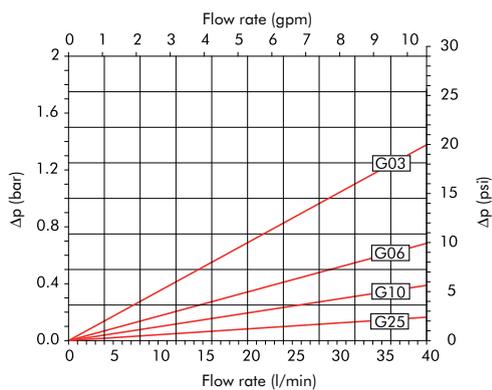

Element D3-11-...-A

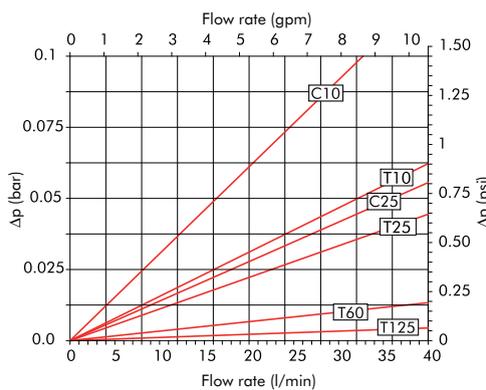


PRESSURE DROP THROUGH THE BY-PASS VALVE

The by-pass valve is a safety device to prevent element collapse in case of differential pressure peaks due to flow peaks, cold start conditions or when the clogged element is not replaced in a timely manner.


The above diagrams have been obtained at the FILTREC laboratory, according to the ISO 3968 specification, with mineral oil having 30 cSt viscosity and 0,86 Kg/dm³ density.

In case of discrepancy, please check contamination level, viscosity and features of the oil in use and the sampling points of the differential pressure.

By-pass FD-3-1x

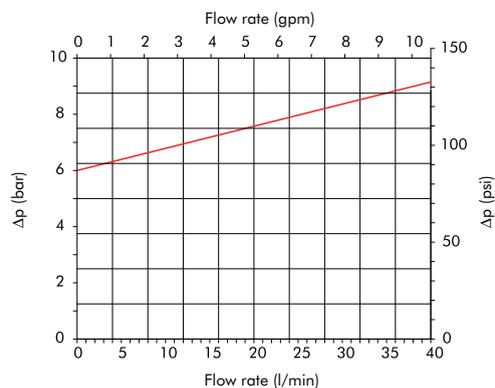

User Tips

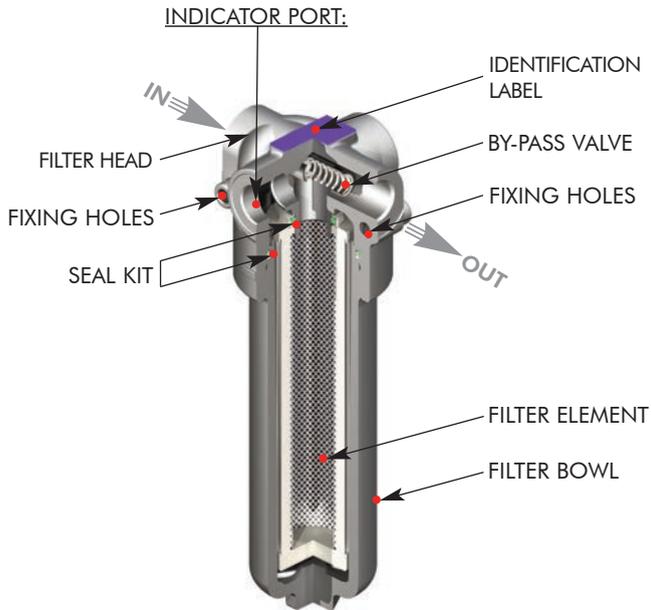

SPARE SEAL KIT PART NUMBER		
	NBR	FKM
FD-3-10/11	06.021.00147	06.021.00148

BOWL TIGHTENING TORQUE	
FD-3-10/11	30 Nm

INDICATOR TIGHTENING TORQUE	
VX5/EX5	50 Nm

Installation

Make sure that the filter is connected in the correct IN-OUT flow direction (shown by an arrow on the filter head).

The filter housing should be preferably mounted with the bowl downward; the filter head should be properly secured using the threaded fixing holes on the filter head; verify that no tension is present on the filter after mounting.

Make sure that enough space is available for element replacement and that the clogging indicator is in a easily viewable position. If an electrical indicator is used, make sure that it is properly wired.

Never run the system without a filter element fitted. We recommend the stocking of a spare FILTREC filter element for timely replacement when required.

Operation

Make sure that the filter works within the conditions of pressure, temperature and fluid compatibility given in the first page of this data sheet.

The filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, oil temperature lower than 30°C, a false alarm can be given due to oil viscosity).

If no clogging indicator is mounted, make sure that the filter element is replaced according to the system manufacturer's recommendations.

WARNING

Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

Disposal of filter elements

The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

Maintenance

Before opening the filter housing, ensure that the system is switched off and there is no residual pressure in the filter.

Unscrew the bowl by turning it anticlockwise.

Remove the dirty filter element pulling it carefully; replace it with a FILTREC element, verifying the part number, particularly concerning the micron rating. When fitting the new element, open the plastic protection on the top and insert the element over the spigot in the filter head, then remove completely the plastic protection.

Clean carefully the bowl; check the gaskets conditions and replace if necessary; lubricate the threads and screw by hand the bowl in the filter head by turning it clockwise. Tighten at the recommended torque.

N.B. The used filter elements cannot be cleaned and re-used.

PED Compliance

FD-3 filters conform to PED 97/23/CE norm, article 3 section 3, and so they can be used with fluids of group 2 (liquids with steam pressure < 0,5 bar at the maximum allowable temperature, article 3, section 1.1(b) – sub-section II).



FD-3 series

www.filtrec.com

